


Easyrig Cinema 2.5/3 mounting instructions

The Cinema 2.5 / 3 installation is done in by mounting the upper and lower bracket on the xSPINE vest, and then place the Easyrig bar onto the two brackets, locking it with the locking brackets on all sides. The lower and upper bracket can stay in place even if the operator is currently not using the Easyrig if they are not in the way.

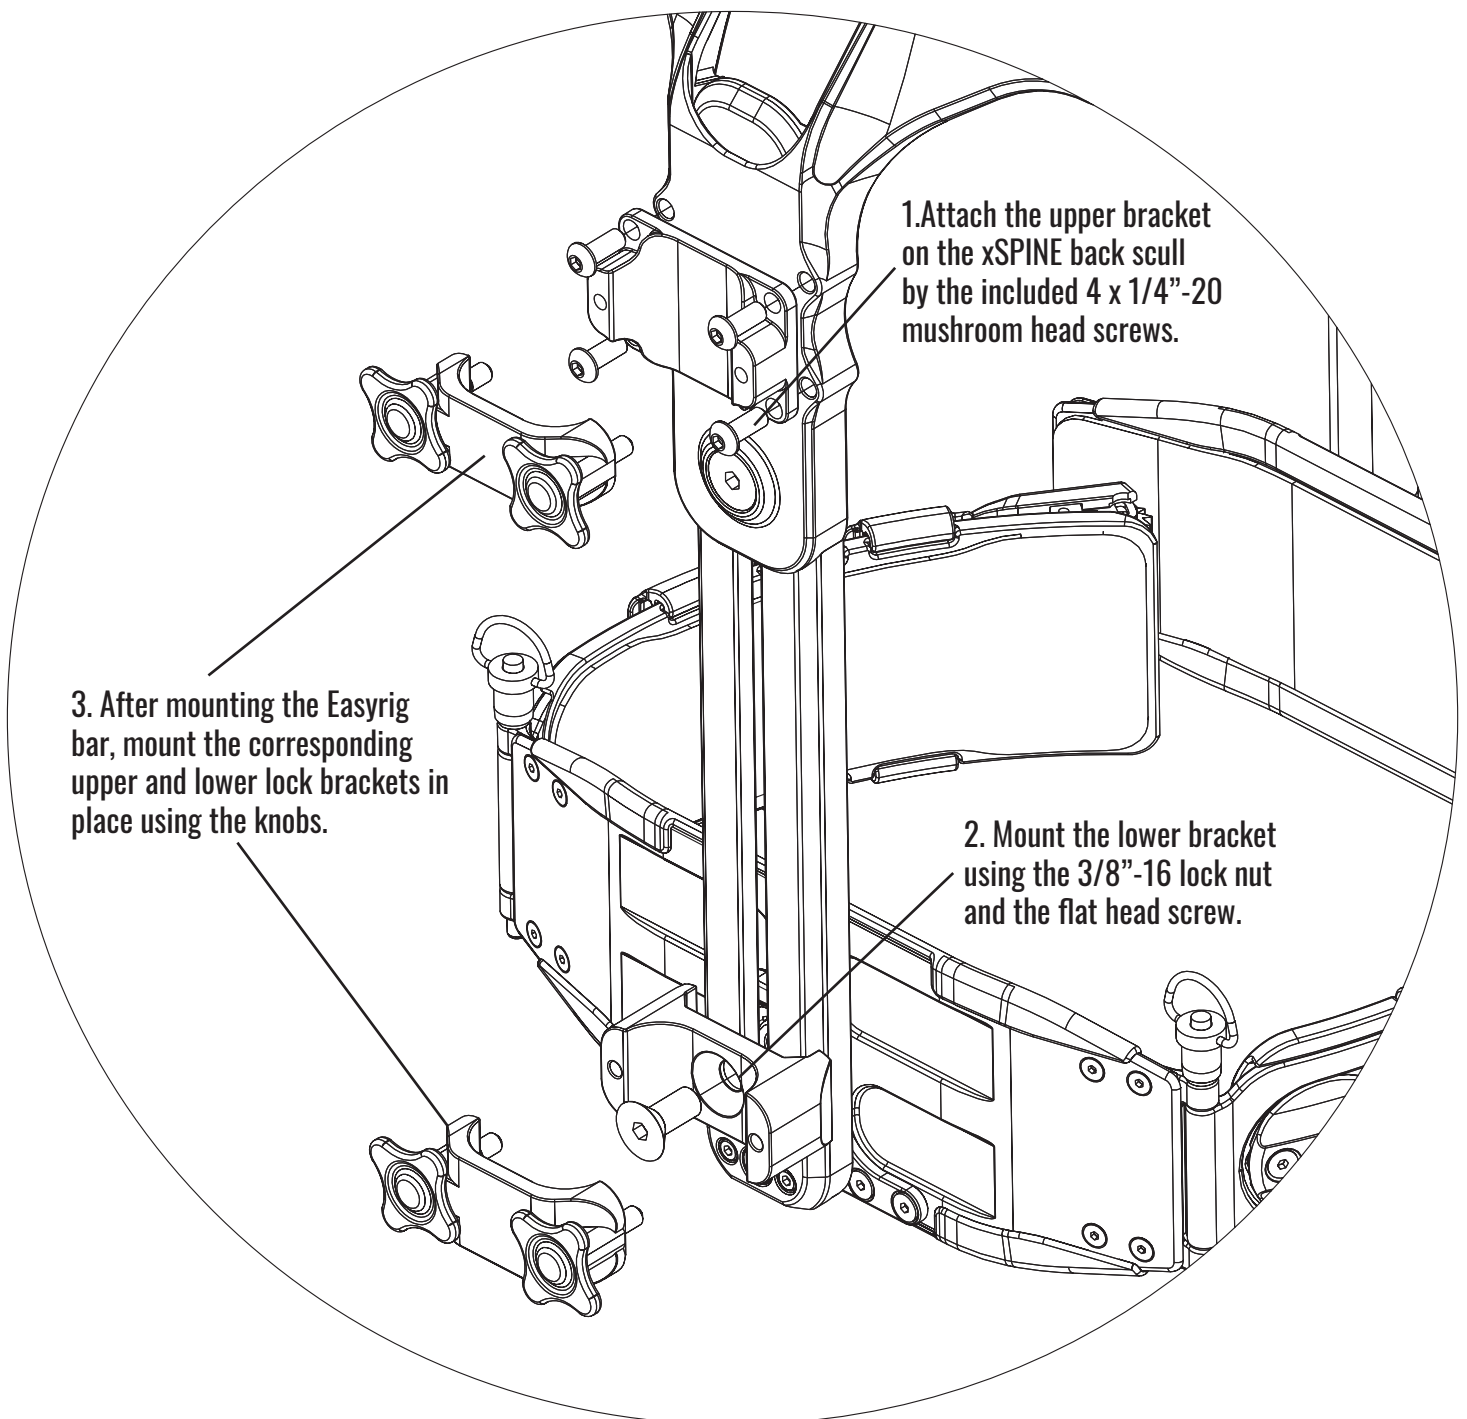

Example pictures of installation:



Easyrig Cinema 2.5 / 3 INSTALLATION